

Flush the pipeline

Metal particles will grip on seal, if the valve hasn't been open during the flushing. That causes scratches to POM ball (pictures below) and also aluminum and steel balls.

Always when flushing the pipeline, the valve must be fully open and flushing must be sufficient to ensure all pollutant will remove.

