

Instructions for removal and reinstallation of painted valves

After removing the flanges of the valve, it is very important to clean all the paint from the surfaces before reinstallation. Do not scratch the surface when removing the paint.

If paint is not cleaned well there is risk of leaking after reinstallation.

Do not use any extra silicones or glue to seal the valve. After reinstallation cleaned surface of flange must be repainted to avoid rust.

